


Assembly instruction

Intermediate Floor StoreMax 160

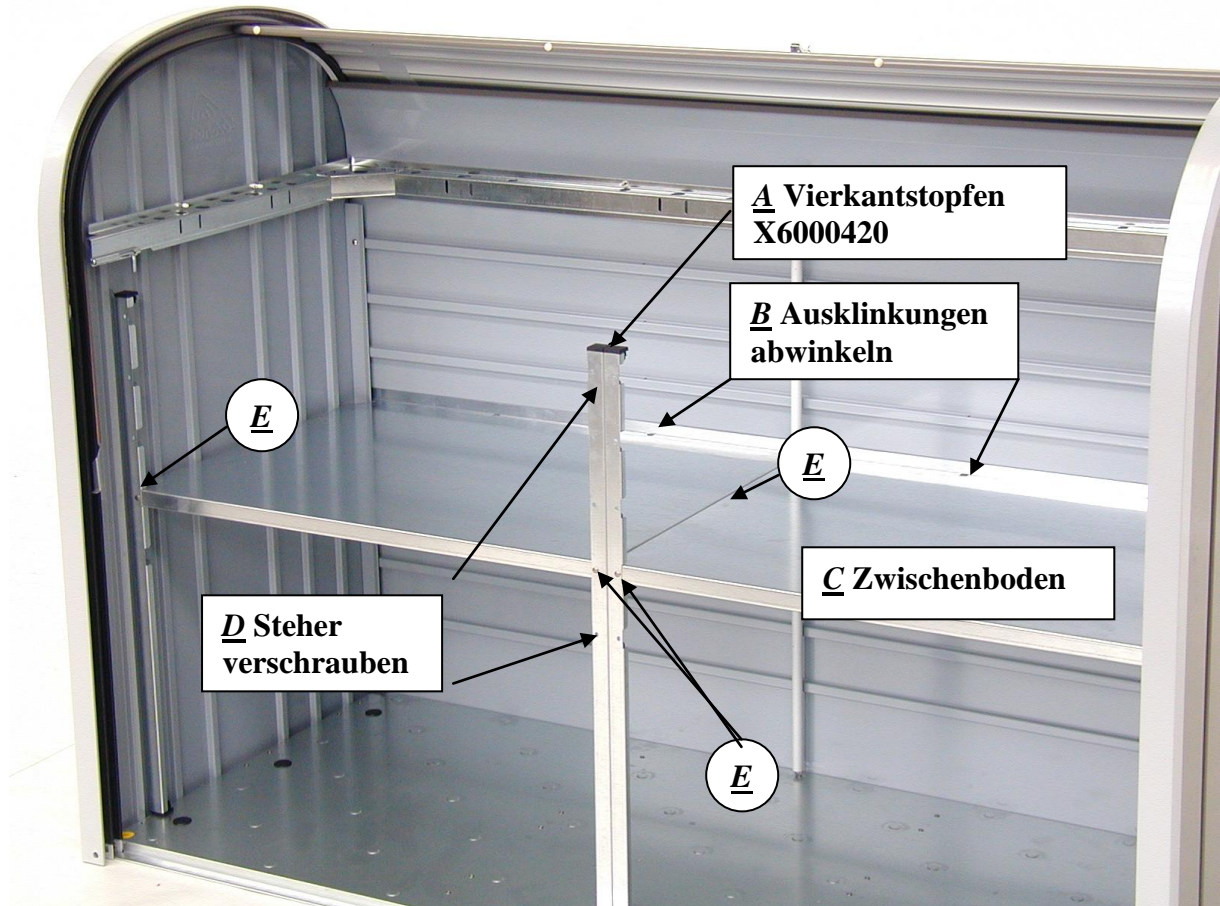

This assembly manual shows the assembly of the intermediate floors at the same level. Nevertheless it is possible to place the intermediate floors one below the other.

1. Press in the square head plugs **A** on both ends of the intermediate floor rails
2. Insert the support rails **B** and turn down the flaps to secure them
3. Insert the shelf brackets **C** into the support rails at desired height
4. Insert the intermediate floor onto the shelf brackets and hold them down at the front corners of the intermediate floor rails (head bolt **D** M4x10mm, washer and nut).
5. Use the sheet-metal screw **E** to screw intermediate floor and support rails together
6. Screw together the middle support rails at the indicated position (head bolt **D** M4x10mm, washer and nut)
7. Finally screw together both intermediate floors by using head bolt **D**

Qualitätskontrolle / Quality-Control / Contrôle-Qualité

Kontrollnummer:

Control-number:

Contrôle-Qualité:

Bei Reklamationen bitte anführen: Kontrollnummer und Artikelnummer des reklamierten Teils.

In case of complaint please indicate the control-number and the number of the item, which is subject of complaint.

Pour toutes réclamations: prière de joindre le numéro de contrôle et le numéro

